

Software Release Notes

dSS V1.9.2

The digitalSTROM AG uses Software Release Notes (SRN) to provide information about software changes and updates of existing products.

Document-Number	SRN-1502
Date/Version	25.02.2015 / v1.0

Affected Products

Product	Software Description	New Version	Where to find the version info	Release date
digitalSTROM Server dSS11/dSS11E	dSS Version	1.9.2	In the dS Configurator (Figure 1)	25.02.2015
digitalSTROM- Meter dSM11/12	ARM Software Version DSP Software Version	1.21.0.0 1.6.0.0	In the dS Configurator (Figure 1)	25.02.2015

Installation Notes

- Execute the software update from the digitalSTROM Configurator via the "System/System Update" menu.
 The dSS11 must be connected to the internet in order to perform the update. Alternatively, the update can be installed using an USB thumb drive.
- It is advisable to back up your system settings prior to performing a system update via
- It is advisable to back up your system settings prior to performing a system update via "System/System Maintenance".
- Once the system updates are installed, the system automatically checks for available dSM firmware updates, which must be installed manually. Install these updates by clicking on the

"Update dSM firmware" button. After the installation, check whether any further updates are available to ensure that all dSMs have been updated.

• When updating from dSS version 1.2.1 or older, please also consider the release notes from earlier updates. A complete list of release notes as well as the USB update file can be found at http://www.digitalstrom.com/Partner/Support/Software-Updates/.



New functions in V1.9.2

Support for additional digitalSTROM-Server

With the new option "Enable support for additional digitalSTROM-Server " the digitalSTROM-Server acts as a gateway between your digitalSTROM hardware and an additional digitalSTROM-Server such as the dSS11-E. If this option is enabled, all tabs except for 'System' and 'Help' are hidden and the my.digitalSTROM connection gets disconnected.

New functions in V1.9.0 and V1.9.1

New group Heating and Temperature control

Two new groups have been introduced for heating: "Heating" and "Temperature control". With the "Heating" group the devices can be controlled over scene calls. On the other hand the temperature control group can be used to control the devices over the room based controller. Within "Edit device properties" the desired group for the digitalSTROM climate terminal block can be selected.

C	Device Properties	S	×						
Device Name: Actuator Bedroom Device ID: 0000501f Device dSID: 302ed89f43f00e800000501f Device dSUID: 302ed89f43f000000000e800000501f00									
	Heating group:	Temperature control							
	Attached terminal device:	Floor heating							
	Push-button:	Device push-button							
	Output Mode:	switched							
	Pulse width modulation (PWM)								
		disabled							
			-1						
	Show Advanced Properties								
		Save Cancel							



Device properties extended for climate

A new dialog "Device properties climate" has been added to be used for the configuration of heating.

There the default settings of digitalSTROM climate terminal block can be changed and the advanced settings as well.

¢	🍄 Device Properties climate	×	<
	Device Name: Actuator Bedroom Device ID: 0000501f Device dSID: 302ed89f43f00e800000501f Device dSUID: 302ed89f43f000000000e800000501f00		
	Settings Advanced Settings		
	Actuator type: Normally closed (N	NC) 🔽	
	Cyclic time of pulse width modulation (PWM): 900	S	
	Deactivate valv	e protection	
	Cyclic time of valve protection: 600	s	
	Setting value in emergency mode 75	%	

Display sensor values

A new dialog "Display sensor values" has been added to display the actual sensor values. It can also be used to select which sensor is to be defined as a room sensor.

🖁 Display	sensor values			3					
Device ID Device d	ame: Sensor Bedroom): 000122f7 SID: 302ed89f43f0268000 SUID: 302ed89f43f0000000		0122f700						
Sensors									
2:									
Index 🔺	Sensor type	Value	Timestamp	Room se					
2	Temperature indoors [°C]	25.9	2015-01-28 00:03:16	1					
3	Relative humidity indoo	20.2	2015-01-28 00:03:20	√					
L									
				Close					

Integration of EnOcean actuators and sensors over P44-gateway

EnOcean devices such as actuators and sensors can be integrated over a P44-gateway into the digitalSTROM system. This was made possible by the introduction of the concept of virtual dSMs and virtual devices (vDCs). An extension of the device number logic (dSUID) was performed.



Heating Controller App

The digitalSTROM heating control is a room based concept such that every single room can be controlled individually.

The Heating Controller can be used over the tab Apps in the digitalSTROM configurator. The configuration consists of selecting the type of heating controller, the settings for each room, apartment and house and of defining the time profiles.

Supporting Danish, Italian, Norwegian, Portuguese and Swedish languages

The digitalSTROM configurator is supporting Danish, Italian, Norwegian, Portuguese and Swedish languages. The language settings can be changed in the status bar in the lower right corner of the configurators user interface. Afterwards all server apps are automatically shown in the selected language.



Hardware Info

Under the hardware tab a new column "HW Info" has been added. This will be helpful for distinguishing the different hardware versions.

ARM Softw	DSP Softw	HW Version	HW Info
1.21.0.0	1.6.0.0	11.1.21.0	dSM11
1.21.0.0	1.6.0.0	12.1.1.0	dSM12



Improvements in V1.9.1

- General improvements and error corrections
- Improved the communication over power line
- Device properties for GE-TKM220 und GE-TKM230 can be edited again

Improvements in V1.9.2

- General improvements and error corrections
- Support for Universal Module 1-10V (GE-UMV200)

Bidgely will discontinue support for digitalSTROM

Registered Bidgely customers were informed on January 20, 2015 that Bidgely will not accept new consumer signups on their web site after January 31 and that the support for digitalSTROM discontinued. Existing accounts will still work. We recommend to save all the necessary data and uninstall the Server App. Reinstalling the Server App will not be possible.



Software Update Recommendation

Updating to the latest version of the software is recommended if you want to benefit from the new features and/or enhancements.

Documentation

Further information about the new features and how to use them can be found in the latest digitalSTROM Manual under "Introduction, Operation, Configuration" and "Installation". The latest version of the manual can be downloaded as PDF at http://www.digitalstrom.com/en/Partner/Support/Operating-manuals/.

How to find the version information

The currently installed software version can be found within the digitalSTROM Configurator.

Арр	os Aktivitäten	Räume G	Gruppen S	System	Hardware	Hilfe								
Mete	er													
là I	I 🎯 🗣 🎯 III	à 😨									\frown	\frown	≣ 🗗	\bigcirc
Statu	us Name			dSM ID)	Anzah	Geräte Ne	eue Geräte Sper	ren Le	istung (ARM Soft.	DSP Soft	HW Versio	n
	F1 EG Wohnra	aum Küche			00000671	9	de	aktiviert	2		1.16.0.0	1.4.1.0	17.1.2.16	
0	F1 EG Korrido	r Schlafzimm	er		00000713	10	ak	tiviert	2		1.16.0.0	1.4.1.0	11.1.21.0	
Gerä		5 10 p q	8				dSM-S	oftware	Vers	ion: /	ARM	DSP	Ē) 0
1	Name 👻	dSID	Ausgang		Eingangs Mod	lus E	ngang	Raum Name	Rau	HW Info	Firm.	. Regist	Inaktiv	
ء 🌾	Deckenleuchte	00018900	gedimmt					Schlafzimmer	2	GE-KM20	0 3.1.7	9 11:50:39		-
21	Faster Schlafzim	000064f6	6 deaktiviert					Schlafzimmer	2	GE-TKM2	10 3.1.4	9 11:48:36		
۹ 😒	Paniktaster	00009abb	deaktiviert		Panik			Wohnraum	4	RT-TKM2	00 3.1.5	9 11:49:43		
æ.	Jalousie	00016c22	2					Schlafzimmer	2	GR-KL20	0 3.2.1	9 11:48:42		-
1.8.0	22h	Versic	n					a	ht aktuali:		Standar		Deutsch	×

Fig. 1: Version number for dSS and dSM