

Software Release Notes

dSS V1.8.2

The digitalSTROM AG uses Software Release Notes (SRN) to provide information about software changes and updates of existing products.

Document-Number	SRN-2014-01
Date/Version	26.3.2014 / v1.0

Affected Products

Product	Software Description	New Version	Where to find the version info	Release date
digitalSTROM Server dSS11	dSS Version	1.8.2	In the dS Configurator (Figure 1)	26.3.2014
digitalSTROM Meter dSM11	ARM Software Version DSP Software Version	1.16.2.0 1.4.1.0	In the dS Configurator (Figure 1)	26.3.2014

 
Installation Notes

- Execute the software update from the digitalSTROM Configurator via the "System/System Update" menu.
The dSS11 must be connected to the internet in order to perform the update. Alternatively, the update can be installed using an USB thumb drive.
- It is advisable to back up your system settings prior to performing a system update via "System/System Maintenance".
- Once the system updates are installed, the system automatically checks for available dSM firmware updates, which must be installed manually. Install these updates by clicking on the "Update dSM firmware" button. After the installation, check whether any further updates are available to ensure that all dSMs have been updated.
- When updating from dSS version 1.2.1 or older, please also consider the release notes from earlier updates. A complete list of release notes as well as the USB update file can be found at <http://www.digitalstrom.com/Partner/Support/Software-Updates/>.

New functions in V1.8.2


Support of Polish language

The digitalSTROM Configurator is now also available in Polish. Language settings can be changed in the status bar at the bottom right corner of the user interface. All server apps are automatically displayed in the language selected beforehand within the configurator. The texts in the Apps that have not yet been translated are still displayed in English.

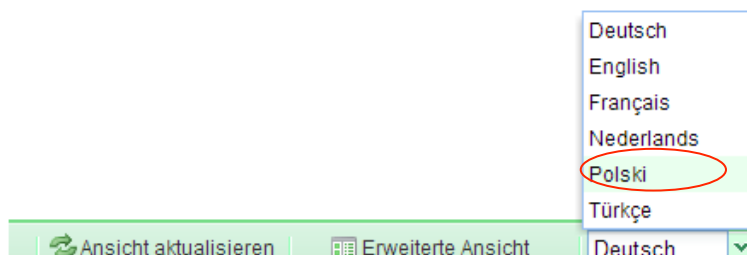


Execution of activities in the dS App with delays

 A new feature in the dS Apps "User Defined Actions", "Event Responder" and "Timers" is the possibility to define a delay for each initiated activity, as already known from the Presence Simulation.

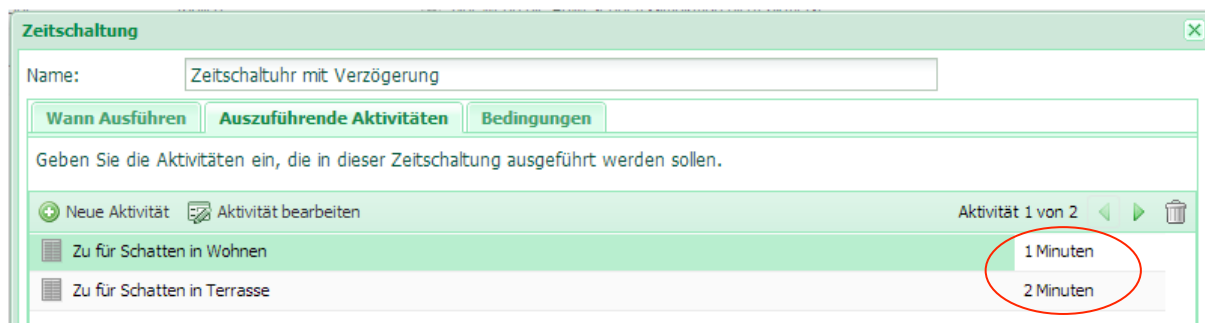

 The defined delays then also appear in the respective App.

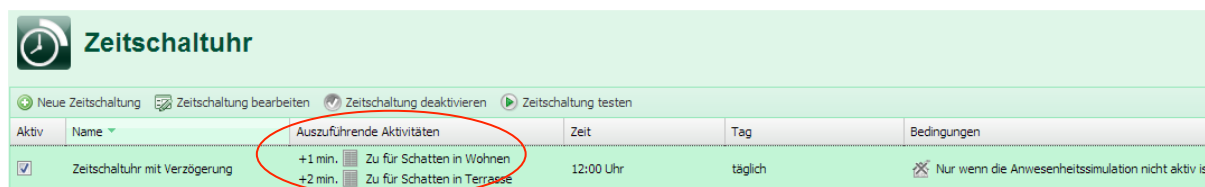

Improvements in V1.8.2

- General improvements and error corrections
- Push Messenger: Texts with umlauts are now supported

Software Update Recommendation

Updating to the latest version of the software is recommended if you want to benefit from the new features and/or enhancements.

Documentation


Further information about the new features and how to use them can be found in the latest digitalSTROM Manual under "Introduction, Operation, Configuration" and "Installation".

The latest version of the manual can be downloaded as PDF at

<http://www.digitalstrom.com/Partner/Support/Bedienungsanleitungen/>.

How to find the version information

The currently installed software version can be found within the digitalSTROM Configurator.

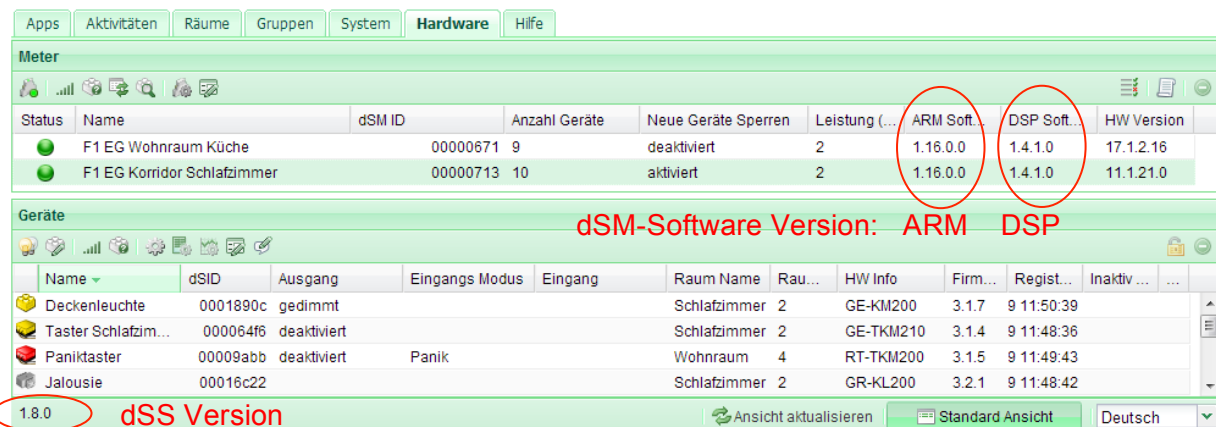

The screenshot shows the digitalSTROM Configurator interface. At the top, there are tabs for 'Apps', 'Aktivitäten', 'Räume', 'Gruppen', 'System', 'Hardware', and 'Hilfe'. Below the tabs is a 'Meter' section with a table of installed devices. The table has columns for 'Status', 'Name', 'dSM ID', 'Anzahl Geräte', 'Neue Geräte Sperren', 'Leistung (...)', 'ARM Soft.', 'DSP Soft.', and 'HW Version'. Two rows are visible, with the 'ARM Soft.' and 'DSP Soft.' columns circled in red. Below the table is a 'Geräte' section with a red banner that reads 'dSM-Software Version: ARM DSP'. Below this is another table with columns for 'Name', 'dSID', 'Ausgang', 'Eingangs Modus', 'Eingang', 'Raum Name', 'Rau...', 'HW Info', 'Firm...', 'Regist...', 'Inaktiv ...', and '...'. At the bottom left, the 'dSS Version' is shown as '1.8.0', which is also circled in red. At the bottom right, there are buttons for 'Ansicht aktualisieren', 'Standard Ansicht', and a language dropdown set to 'Deutsch'.

Status	Name	dSM ID	Anzahl Geräte	Neue Geräte Sperren	Leistung (...)	ARM Soft.	DSP Soft.	HW Version
●	F1 EG Wohnraum Küche	00000671	9	deaktiviert	2	1.16.0.0	1.4.1.0	17.1.2.16
●	F1 EG Korridor Schlafzimmer	00000713	10	aktiviert	2	1.16.0.0	1.4.1.0	11.1.21.0

Name	dSID	Ausgang	Eingangs Modus	Eingang	Raum Name	Rau...	HW Info	Firm...	Regist...	Inaktiv
Deckenleuchte	0001890c	gedimmt			Schlafzimmer	2	GE-KM200	3.1.7	9 11:50:39		
Taster Schlafzim...	000064f6	deaktiviert			Schlafzimmer	2	GE-TKM210	3.1.4	9 11:48:36		
Paniktaster	00009abb	deaktiviert	Panik		Wohnraum	4	RT-TKM200	3.1.5	9 11:49:43		
Jalousie	00016c22				Schlafzimmer	2	GR-KL200	3.2.1	9 11:48:42		

Fig. 1: Version number for dSS and dSM